

MINIMAL


I Istruzioni di montaggio e di assistenza
DEVIATORE DA INCASSO DA 3 A 5 VIE

GB Installation and service instructions
3÷5-WAY BUILT-IN DEVIATOR

F Instructions de montage et d'entretien
INVERSEUR 3÷5 VOIES À ENCASTRER

D Montage- und Serviceanleitung
WANDUMSTELLER 3÷5 AUSSTRITTE

RVDM02



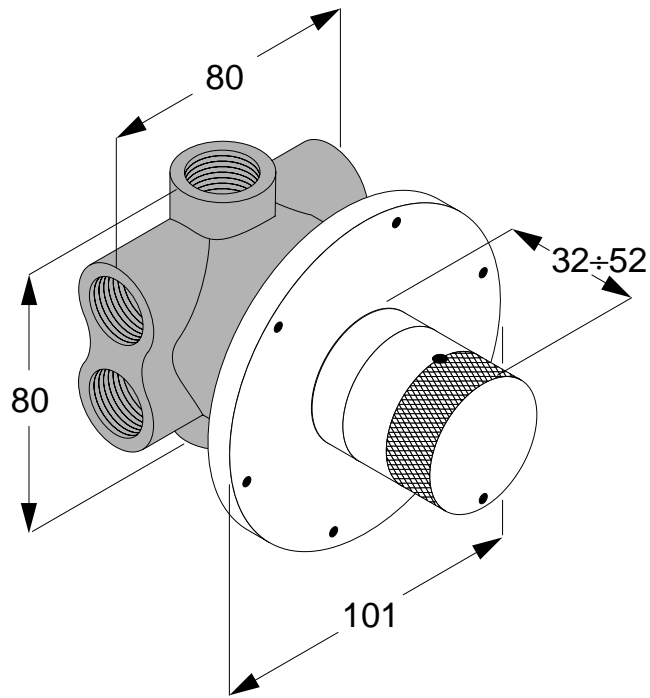


Dimensioni d'ingombro e quote di fissaggio

Overall dimensions and fixing points

Dimensions d'encombrement et fixations

Maßen und Befestigungshöhe

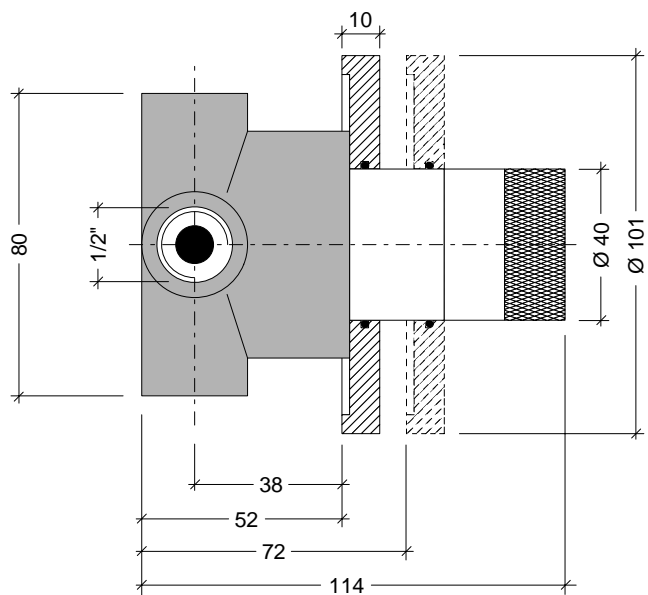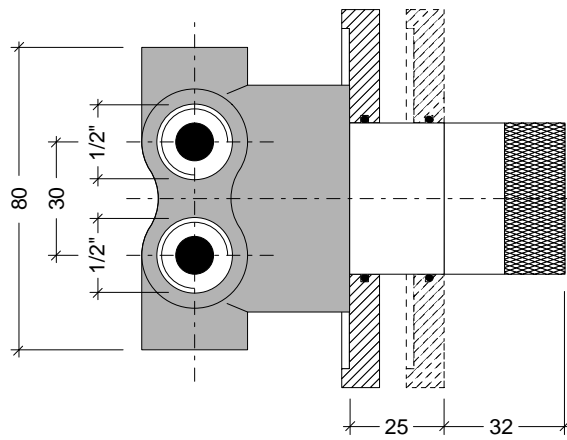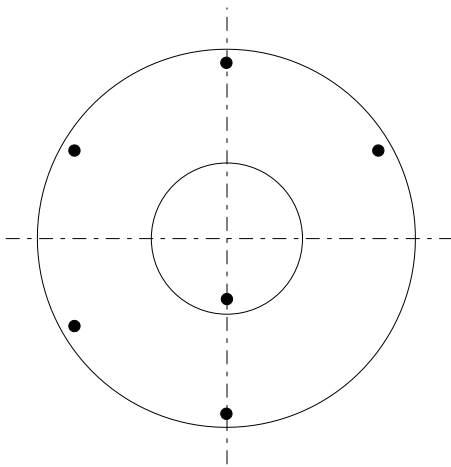


Installazione

Installation


Installation

Installation


1

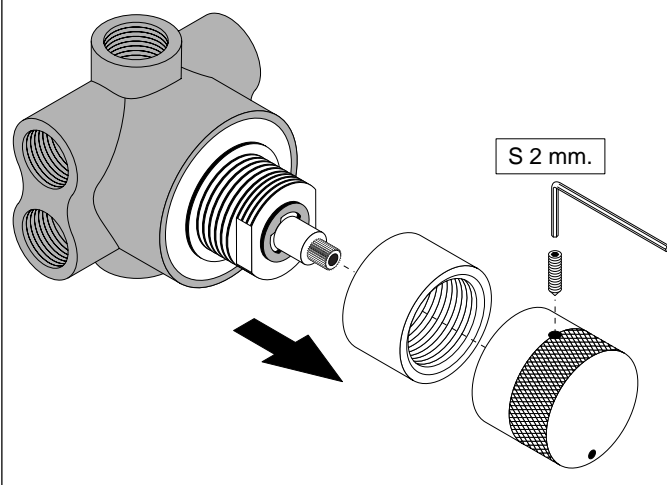


4

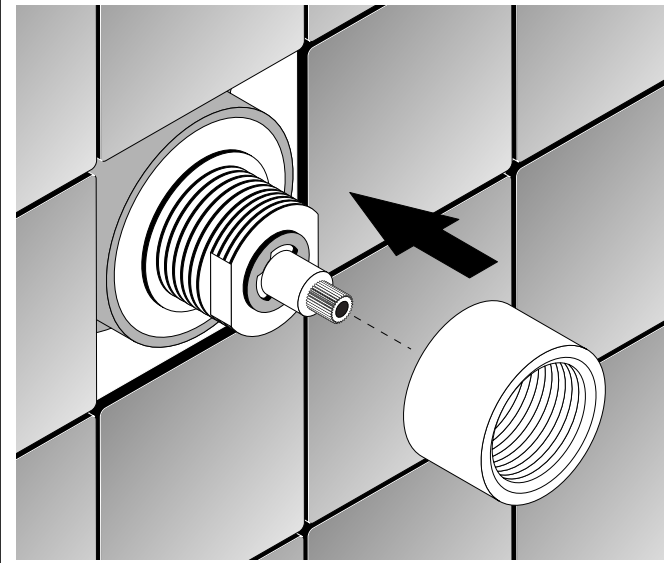


2

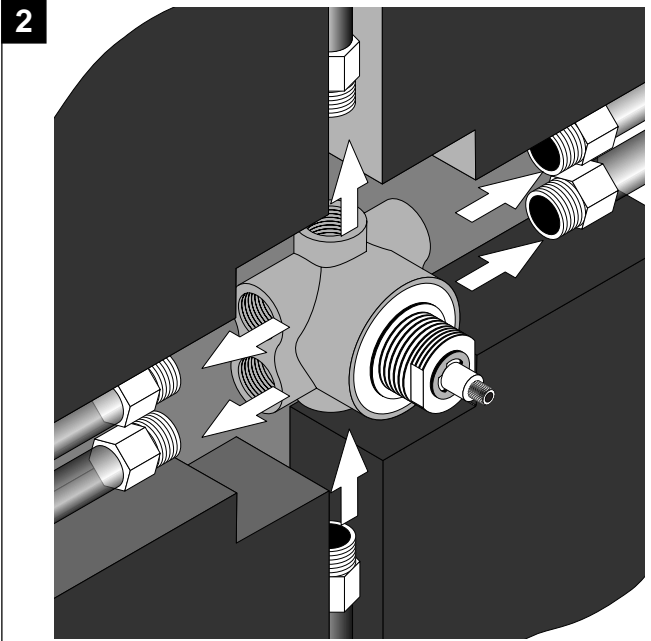


5

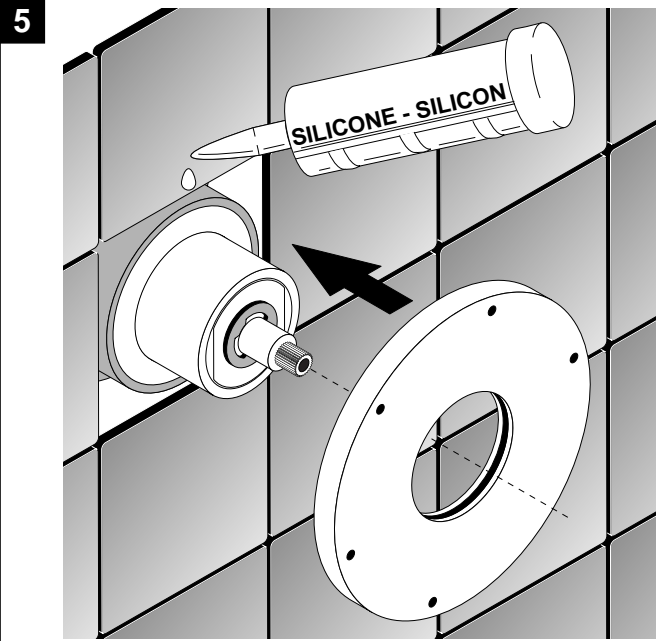


3

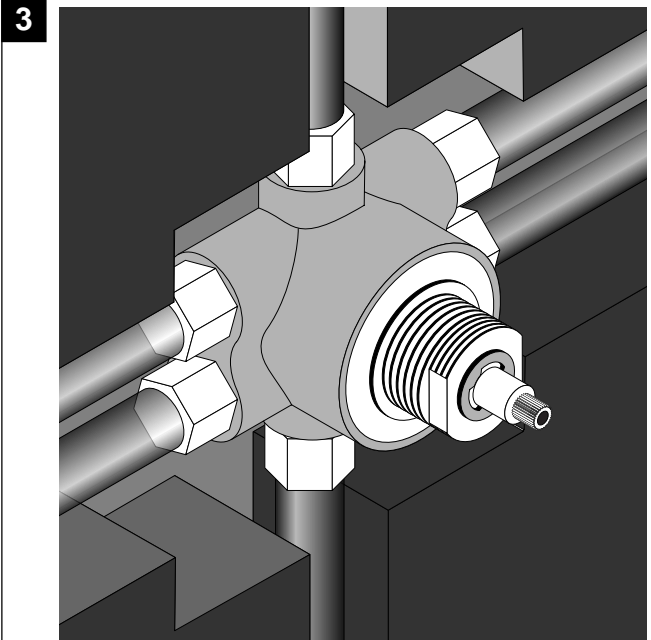

6

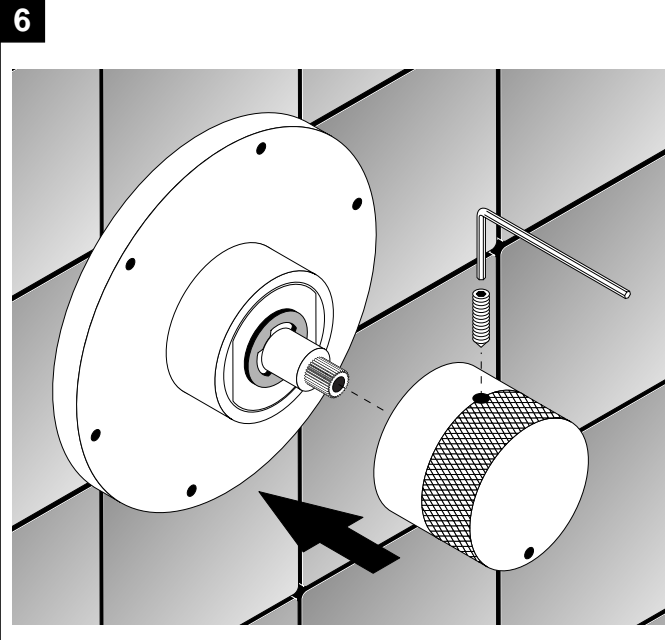

Schema di funzionamento
Working instructions
Instructions de fonctionnement
Funktionsbeschreibung

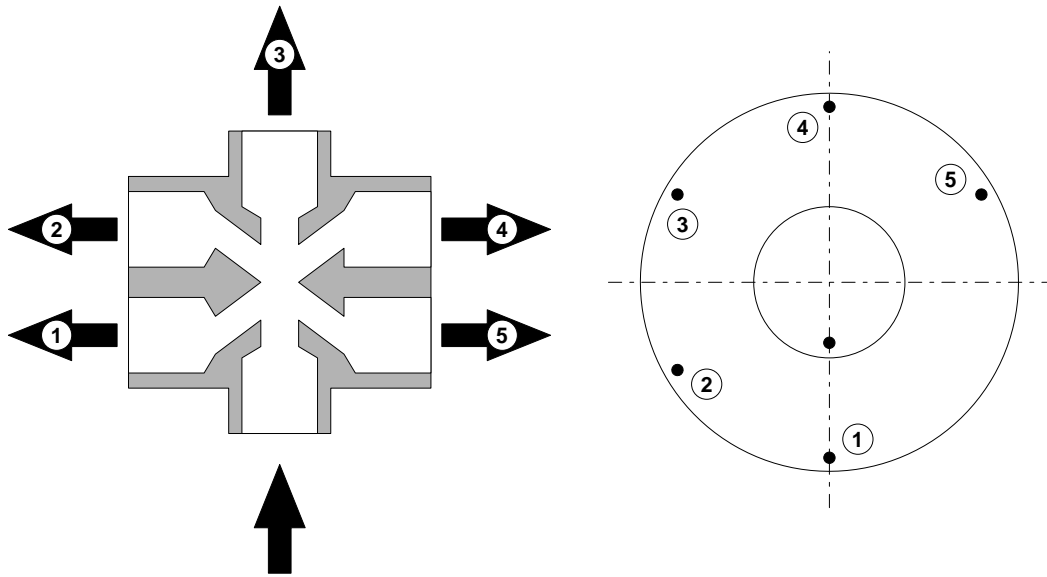

Pezzi di ricambio
Spare parts
Pièces de rechange
Ersatzteile

